



**Penalty Time**

- 1) The entry of 5 incorrect codes will cause the lock to enter Penalty Time where the lock is lock down for a period of 5 minutes. You cannot open the lock during the penalty time period.
- 2) During the Penalty Time, the keypad will beep every 5 seconds and the buttons on the keypad are not operable. Entering additional codes during penalty time does not extend penalty time.
- 3) Two beeps indicates penalty time has expired and the beeping will stop, enter a valid code to open the safe lock.
- 4) Note: If after penalty expires you enter an invalid code two more times, the lock will go back into penalty time.

**Troubleshooting**

- 1) Lock beeps 10 times after fingerprint/code entry: This is the low battery indicator. Replace the battery with a new Duracell or Energizer battery.
- 2) Green lights after input of fingerprint or code – this is an indication of a valid fingerprint or code entry
- 3) Red lights after input of fingerprint or code – this is an indication of an invalid fingerprint or code entry